


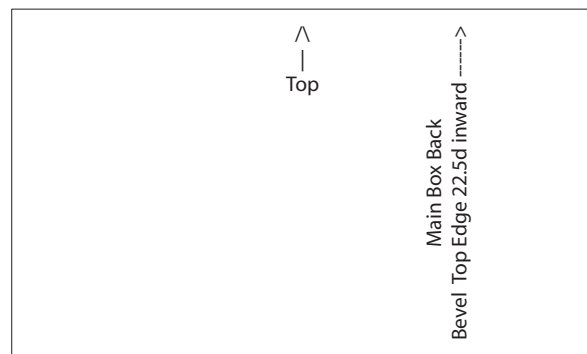
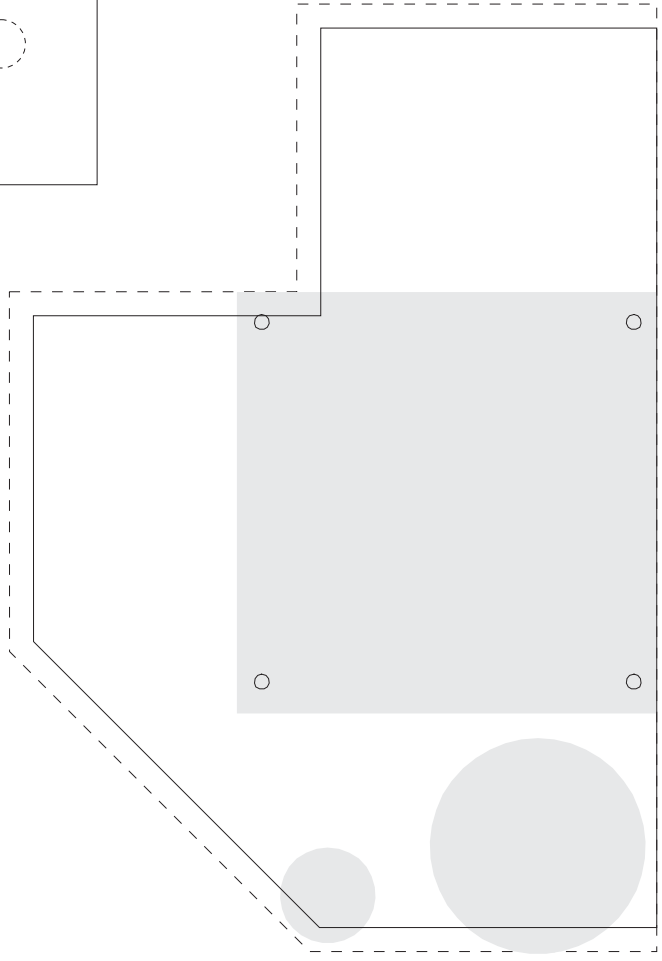
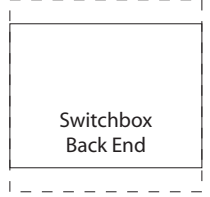
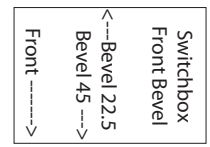
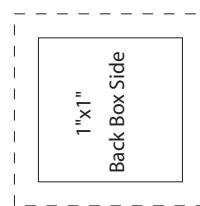
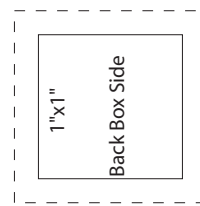
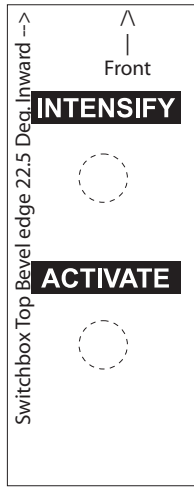
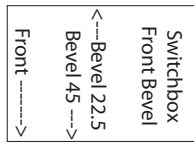
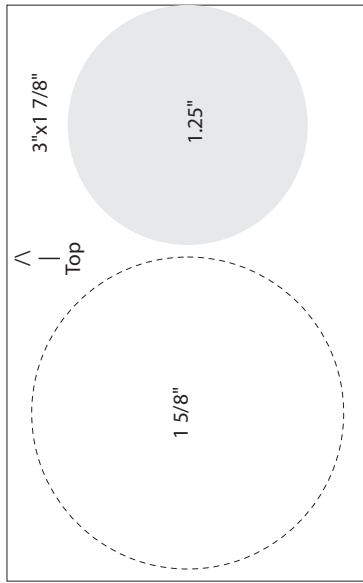
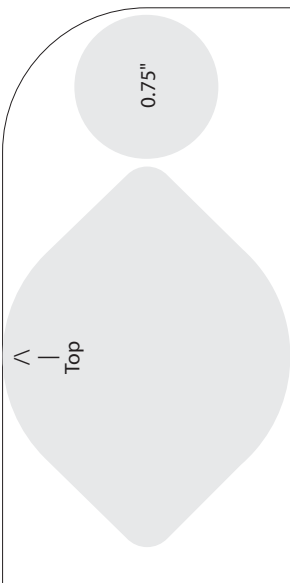
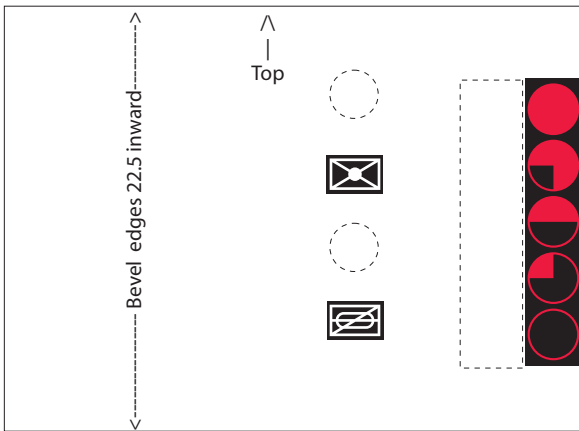
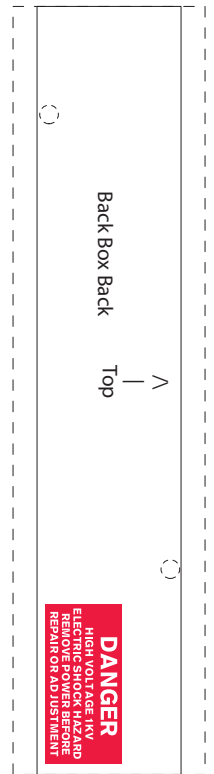
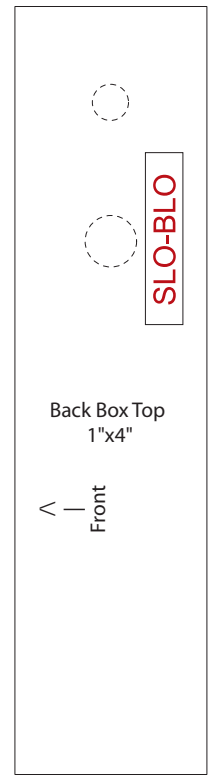
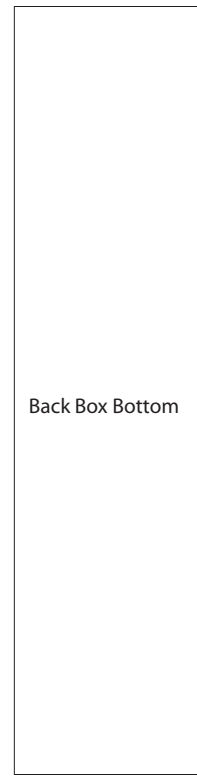
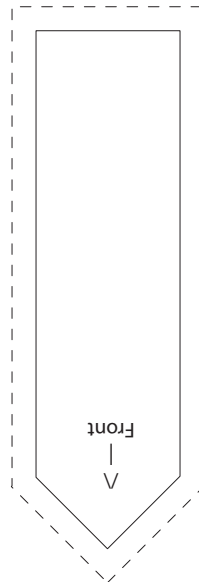
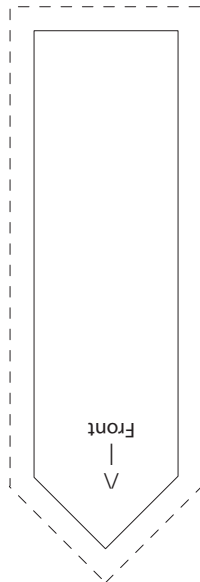


△ Fudge rounded corner by sanding or cutting away flat edges and replace with section of 1.5" diameter dowel or tube
 | and replace with section of 1.5" diameter dowel or tube
 ∨ OR: Backfill corner with Bondo & just sand down corner

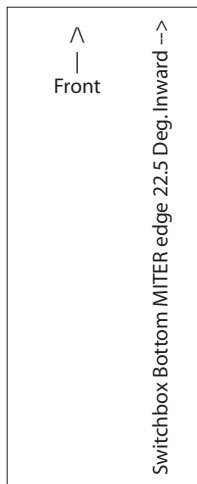

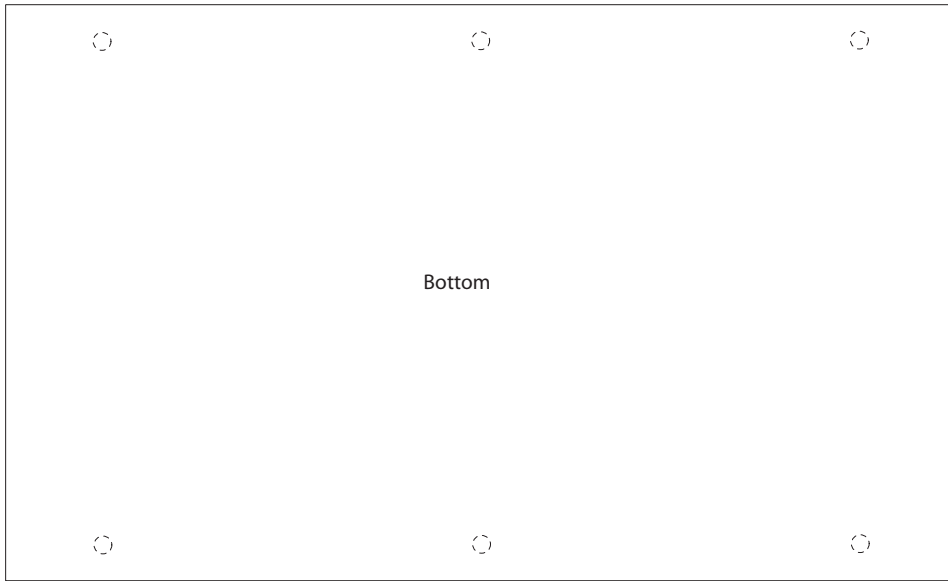

- Patterns derived from BugStomper's most excellent Plans!
- Patterns intended for 1/8" thick material
- Dotted Outlines are Actual Size of pieces, but Solid lines are where to cut to allow for 1/8" material thickness
- Gray Outlines show where various items get glued on, labels also for placement guidance

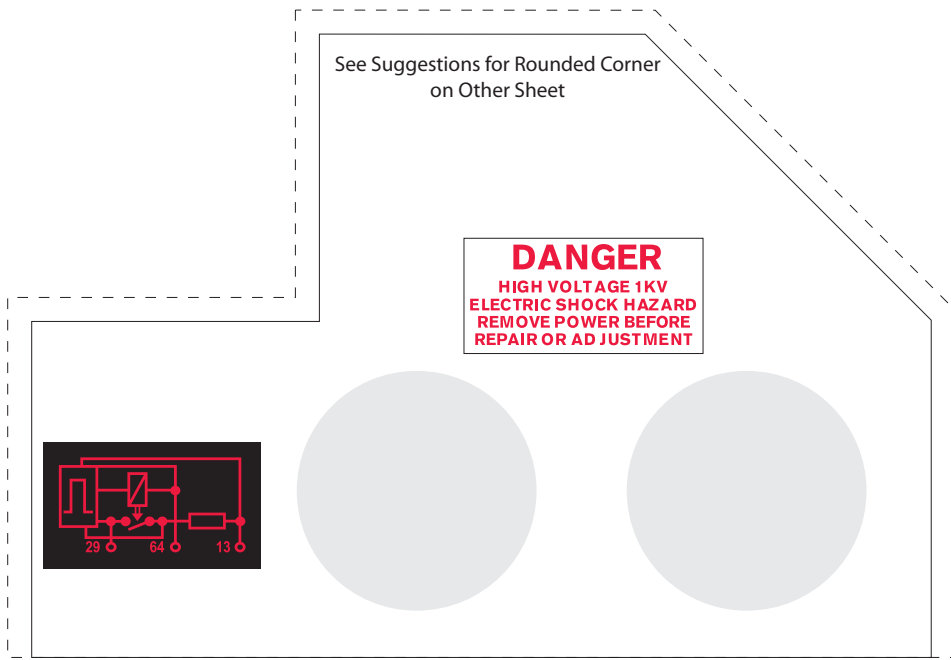